
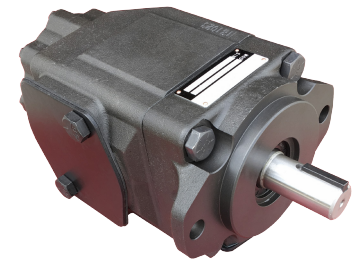
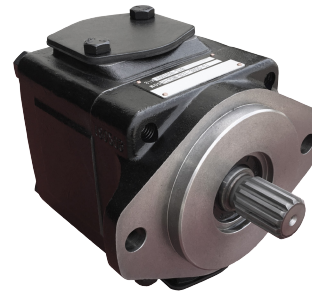
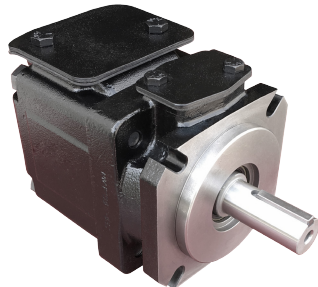


VANE PUMPS

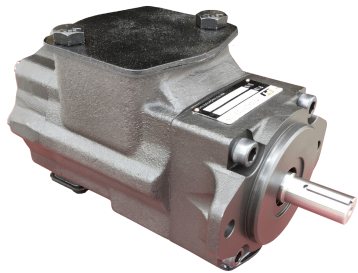

WARNING

FAILURE OR IMPROPER SELECTION OR IMPROPER USE OF THE PRODUCTS AND/OR SYSTEMS DESCRIBED HEREIN OR RELATED ITEMS CAN CAUSE DEATH, PERSONAL INJURY AND PROPERTY DAMAGE.

This document and other information from Hyflow Southeast Inc., its subsidiaries and authorized distributors provide product and/or system options for further investigation by users having technical expertise. It is important that you analyze all aspects of your application and review the information concerning the product or system in the current product catalog. Due to the variety of operating conditions and applications for these products or systems, the user, through its own analysis and testing, is solely responsible for making the final selection of the products and systems and assuring that all performance, safety and warning requirements of the application are met.

The products described herein, including without limitation, product features, specifications, designs, availability and pricing, are subject to change by Hyflow Southeast Inc. and its subsidiaries at any time without notice.

Please note: All parts supplied are Hyflow Southeast®. The use of other manufactures' names, part numbers, descriptions or trademarks is for cross reference and informational purposes only.

CONTENTS

SINGLE VANE PUMPS

HT6C, HT6CM	Page 1
HT6D, HT6DM, HT6DP	Page 2
HT6E, HT6EM, HT6EP	Page 3
HT7B, HT7BS	Page 4
HT7D, HT7DS	Page 5
HT7DSW	Page 6
HT7E, HT7ES	Page 7

DOUBLE VANE PUMPS

HT6CC, HT6CCM, HT6CCP, HT6CCZ	Page 8
HT6DC, HT6DCM, HT6DCP	Page 9
HT6ED, HT6EDM, HT6EDP	Page 10
HT7ED, HT7EDS	Page 11
HT7EE, HT7EES	Page 12
WARRANTY	Page 13

HT6C, HT6CM

MODEL CODE

HT6C * * - *22 - 1 R 00 - B 1 *

Series _____

*M = Mobile (*omit for Industrial) _____

*Y = Metric port connection, omit for UNC _____

Cam ring	Displacement	Cam ring	Displacement
	in ³ /rev (cm ³ /rev)		in ³ /rev (cm ³ /rev)
003/B03/R03	= 0.66 (10.8)	017/B17/R17	= 3.56 (58.3)
005/B05/R05	= 1.05 (17.2)	020/B20/R20	= 3.89 (63.8)
006/B06/R06	= 1.30 (21.3)	022/B22/R22	= 4.29 (70.3)
008/B08/R08	= 1.61 (26.4)	025/B25/R25	= 4.84 (79.3)
010/B10/R10	= 2.08 (34.1)	028/B28/R28	= 5.42 (88.8)
012/B12/R12	= 2.26 (37.1)	031/B3/R311	= 6.10 (100.0)
014/B14/R14	= 2.81 (46.0)		

(Select 'B**' for Mobile and Industrial bi-directional)
 (Select 'R**' for Mobile-spring assisted)

Type of Shaft _____

1 = Keyed (SAE B)
 2 = Keyed (no SAE)
 3 = Splined (SAE B)
 4 = Splined (SAE B-B)

Modification _____

Seal class _____
 1 = S1 - BUNA N
 4 = S4 - EPDM
 5 = S5 - VITON

Design letter _____
 B = Industrial C = Mobile

Porting combination: (00 = Standard)

00
P

01
P-S

02
P

03
P

Direction of rotation _____
 R = Clockwise
 L = Counter - clockwise

To change porting position, follow the steps below:


Secure the pump and remove 4 bolts from housing. Move the housing 1 to 2 mm away from the mounting flange. Insert two bolts halfway into the housing. Install a wrench between the two bolts and turn in the desired direction, so that the required position of the pressure port, with respect to suction is obtained. Reinstall the bolts and tighten to the corresponding mounting torque, as provided.

Instructions: Do not remove the housing completely from the mounting flange, remove only 1 to 2 mm to avoid the cartridge pin from moving out from the housing dowel pin hole. Make sure no piece of paint enters the gap to avoid leakage. If it is difficult to turn housing, put some hydraulic oil into the pressure port to lubricate the pressure port seals.

HT6D, HT6DM, HT6DP

MODEL CODE

HT6D * * * - *42 - 1 R 00 - B 1 - *

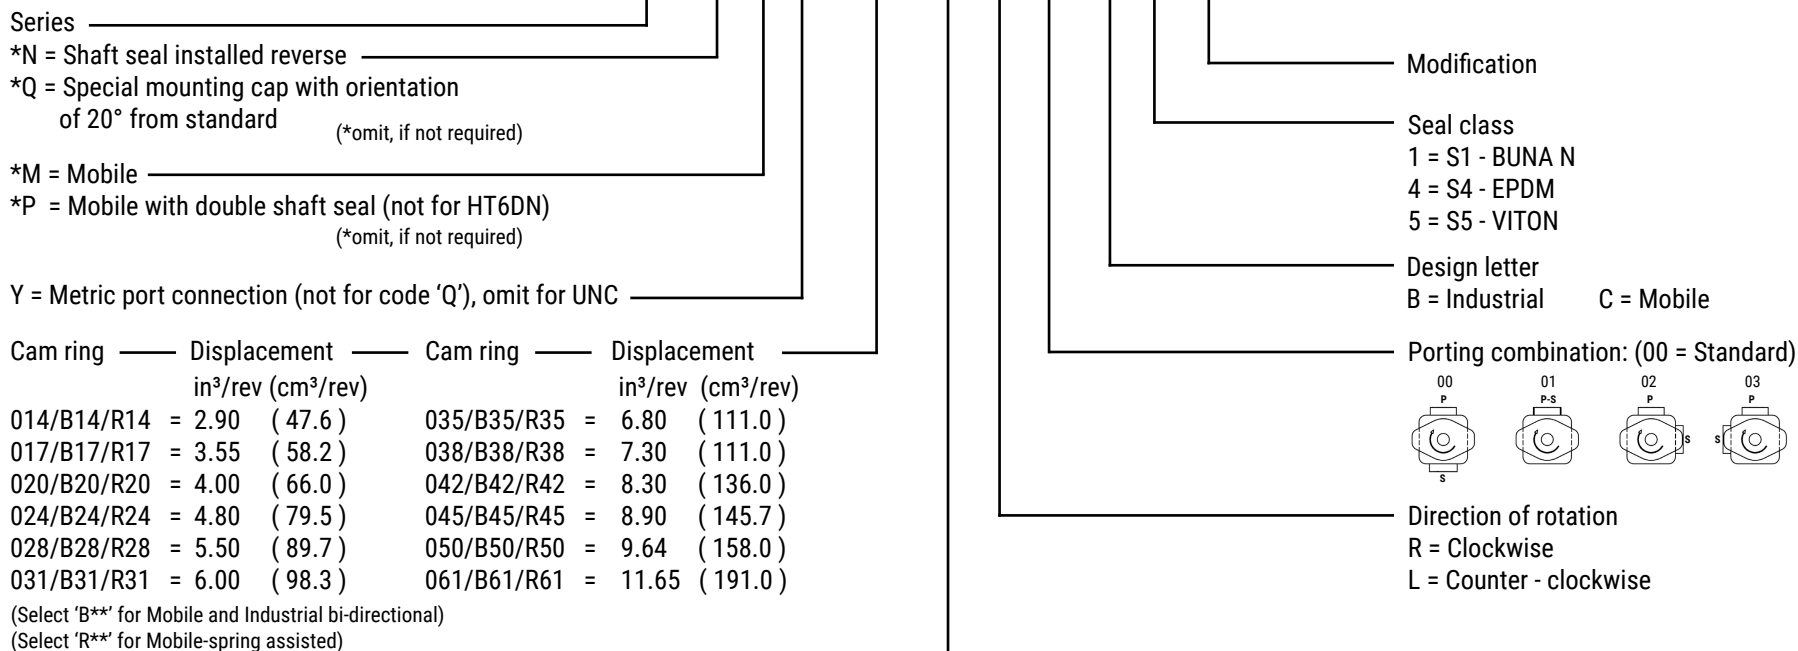

Type of Shaft	Type of Shaft	Type of Shaft
HT6D/HT6DN/HT6DQ	HT6DM/HT6DNM/HT6DQM	HT6DP/HT6DQP
1 = Keyed (SAE - C)	1 = Keyed (SAE - C)	3 = Splined (no SAE)
2 = Keyed (no SAE)	2 = Keyed (no SAE)	
3 = Splined (SAE - C)	3 = Splined (SAE - C)	
4 = Splined (no SAE)	4 = Splined (no SAE)	
	T = Splined (SAE j718c)	

To change porting position, follow the steps below:

Secure the pump and remove 4 bolts from housing. Move the housing 1 to 2 mm away from the mounting flange. Insert two bolts halfway into the housing. Install a wrench between the two bolts and turn in the desired direction, so that the required position of the pressure port, with respect to suction is obtained. Reinstall the bolts and tighten to the corresponding mounting torque, as provided.

Instructions: Do not remove the housing completely from the mounting flange, remove only 1 to 2 mm to avoid the cartridge pin from moving out from the housing dowel pin hole. Make sure no piece of paint enters the gap to avoid leakage. If it is difficult to turn housing, put some hydraulic oil into the pressure port to lubricate the pressure port seals.

HT6E, HT6EM, HT6EP

MODEL CODE

HT6E * * - *66 - 1 R 00 - A 1 *

Series _____
 *M = Mobile _____
 *P = Mobile with double shaft seal
 (*omit for Industrial)

Y = Metric port connection, omit for UNC

Cam ring	Displacement in ³ /rev (cm ³ /rev)	Cam ring	Displacement in ³ /rev (cm ³ /rev)
042/B42/R42	= 8.07 (132.30)	057/B57/R57	= 11.02 (180.70)
045/B45/R45	= 8.70 (142.40)	062/B62/R62	= 12.00 (196.70)
050/B50/R50	= 9.67 (158.50)	066/B66/R66	= 13.00 (213.30)
052/B52/R52	= 10.00 (164.80)	072/B72/R72	= 13.86 (227.10)
		085/B85/R85	= 16.40 (269.80)

(Select '0**' for Standard and Mobile)
 (Select 'B**' for Mobile and Industrial bi-directional)
 (Select 'R**' for Mobile-spring assisted)

Type of Shaft	Type of Shaft	Type of Shaft
HT6E 1 = Keyed (SAE - CC) 2 = Keyed (no SAE) 3 = Splined (SAE - C) 4 = Splined (SAE - CC)	HT6EM 1 = Keyed (SAE - CC) 2 = Keyed (no SAE) 3 = Splined (SAE - C) 4 = Splined (SAE - CC) T = Splined (SAE J718c)	HT6EP 3 = Splined (no SAE)

Modification

Seal class
 1 = S1 - BUNA N
 4 = S4 - EPDM
 5 = S5 - VITON

Design letter
 A = Industrial B = Mobile

Porting combination: (00 = Standard)

Direction of rotation
 R = Clockwise
 L = Counter - clockwise

To change porting position, follow the steps below:

Secure the pump and remove 4 bolts from housing. Move the housing 1 to 2 mm away from the mounting flange. Insert two bolts halfway into the housing. Install a wrench between the two bolts and turn in the desired direction, so that the required position of the pressure port, with respect to suction is obtained. Reinstall the bolts and tighten to the corresponding mounting torque, as provided.

Instructions: Do not remove the housing completely from the mounting flange, remove only 1 to 2 mm to avoid the cartridge pin from moving out from the housing dowel pin hole. Make sure no piece of paint enters the gap to avoid leakage. If it is difficult to turn housing, put some hydraulic oil into the pressure port to lubricate the pressure port seals.

HT7B, HT7BS

MODEL CODE

HT7B/HT7BS - B10 - 1 R 00 - A 1 M0 -

Series _____
 HT7B series - 100 A2 HW
 ISO 2 bolts 3019 - 2 mounting flange
 HT7BS series - SAE B 2 bolts
 Mounting flange J744c

Cam ring	Displacement	Cam ring	Displacement
	in ³ /rev (cm ³ /rev)		in ³ /rev (cm ³ /rev)
B02	= 0.35 (5.7)	B09	= 1.71 (28.0)
B03	= 0.60 (9.8)	B10	= 1.94 (31.8)
B04	= 0.78 (12.8)	B11	= 2.13 (34.9)
B05	= 0.97 (15.9)	B12	= 2.50 (40.9)
B06	= 1.21 (19.8)	B14	= 2.75 (45.1)
B07	= 1.37 (22.5)	B15	= 3.05 (50.0)
B08	= 1.52 (24.9)		

Type of Shaft

HT7BS
 1 = Keyed (SAE - B)
 3 = Splined (SAE B)
 4 = Splined (SAE BB)

HT7B - HT7BS
 2 = Keyed (ISO R775)


Modification
 Mounting w/ connection variables
 4 bolts SAE flange (J518C)

	UNC HT7BS		METRIC HT7B-HT7BS	
	00	01	M0	M1
P	1"	3/4"	1"	3/4"
S	1 1/2"			

Seal class
 1 = S1 - BUNA N
 4 = S4 - EPDM
 5 = S5 - VITON

Design letter

Porting combination: (00 = Standard)



S - Suction port P - Pressure port

Direction of rotation
 R = Clockwise
 L = Counter - clockwise

To change porting position, follow the steps below:

Secure the pump and remove 4 bolts from housing. Move the housing 1 to 2 mm away from the mounting flange. Insert two bolts halfway into the housing. Install a wrench between the two bolts and turn in the desired direction, so that the required position of the pressure port, with respect to suction is obtained. Reinstall the bolts and tighten to the corresponding mounting torque, as provided.

Instructions: Do not remove the housing completely from the mounting flange, remove only 1 to 2 mm to avoid the cartridge pin from moving out from the housing dowel pin hole. Make sure no piece of paint enters the gap to avoid leakage. If it is difficult to turn housing, put some hydraulic oil into the pressure port to lubricate the pressure port seals.

HT7D, HT7DS

MODEL CODE

HT7D/HT7DS - B42 - 1 R 00 - A 1 M0 -

Series _____
 HT7D - series - 125 A2 HW
 ISO 2 bolts 3019-2 mounting flange
 HT7DS - series - SAE C 2 bolts
 Mounting flange J744c

Cam ring	Displacement	Cam ring	Displacement
	in ³ /rev (cm ³ /rev)		in ³ /rev (cm ³ /rev)
B14	= 2.68 (43.9)	B31	= 6.05 (28.0)
B17	= 3.36 (55.0)	B35	= 6.92 (113.4)
B20	= 4.03 (66.0)	B38	= 7.36 (120.6)
B22	= 4.29 (70.3)	B42	= 8.39 (137.5)
B24	= 4.95 (81.3)	045	= 8.89 (145.7)
B28	= 5.49 (89.9)	050	= 9.64 (157.9)

Type of Shaft _____

HT7DS
 1 = Keyed (SAE - C)
 2 = Keyed (no SAE)
 3 = Splined (SAE - C)
 4 = Splined (no SAE)

HT7DS - HT7D
 5 - Keyed (ISO 3019-2-G32M)

Modification
 Mounting w/ connection variables
 4 bolts SAE flange (J518C)


P = 1" 1/4		S = 2"	
UNC METRIC			
HT7D		M0	
HT7DS	00	M0	Y0 ¹⁾

1) 250 bar max. int.

Seal class
 1 = S1 - BUNA N
 4 = S4 - EPDM
 5 = S5 - VITON

Design letter

Porting combination: (00 = Standard)
 00 - standard



S - Suction port P - Pressure port

Direction of rotation (view on shaft end)
 R = Clockwise
 L = Counter - clockwise

To change porting position, follow the steps below:

Secure the pump and remove 4 bolts from housing. Move the housing 1 to 2 mm away from the mounting flange. Insert two bolts halfway into the housing. Install a wrench between the two bolts and turn in the desired direction, so that the required position of the pressure port, with respect to suction is obtained. Reinstall the bolts and tighten to the corresponding mounting torque, as provided.

Instructions: Do not remove the housing completely from the mounting flange, remove only 1 to 2 mm to avoid the cartridge pin from moving out from the housing dowel pin hole. Make sure no piece of paint enters the gap to avoid leakage. If it is difficult to turn housing, put some hydraulic oil into the pressure port to lubricate the pressure port seals.

HT7DSW

MODEL CODE

HT7DSW - *42 - X R 00 - A 1 W1 -

Series _____

Cam ring	Displacement	Cam ring	Displacement
	in ³ /rev (cm ³ /rev)		in ³ /rev (cm ³ /rev)
014/B14	= 2.68 (43.9)	031/B31	= 6.05 (99.1)
017/B17	= 3.36 (55.0)	035/B35	= 6.92 (113.4)
020/B20	= 4.03 (66.0)	038/B38	= 7.36 (120.6)
022/B22	= 4.29 (70.3)	042/B42	= 8.39 (137.5)
024/B24	= 4.95 (81.3)	045/B45	= 8.89 (145.7)
028/B28	= 5.49 (89.9)	050/B50	= 9.64 (157.9)

Type of Shaft _____

X = Keyed (SAE - C)
3 = Splined (SAE - C)

Modification


Mounting w/ connection variables
4 bolts SAE flange (J518)

P = 1-1/4"	S = 2-1/2"	
	UNC	METRIC
HT7DSW	W1	M1

Seal class
1 = S1 - BUNA N
4 = S4 - EPDM
5 = S5 - VITON

Design letter

Porting combination: (00 = Standard)



S - Suction port P - Pressure port

Direction of rotation (view on end shaft)
R = Clockwise
L = Counter - clockwise

To change porting position, follow the steps below:

Secure the pump and remove 4 bolts from housing. Move the housing 1 to 2 mm away from the mounting flange. Insert two bolts halfway into the housing. Install a wrench between the two bolts and turn in the desired direction, so that the required position of the pressure port, with respect to suction is obtained. Reinstall the bolts and tighten to the corresponding mounting torque, as provided.

Instructions: Do not remove the housing completely from the mounting flange, remove only 1 to 2 mm to avoid the cartridge pin from moving out from the housing dowel pin hole. Make sure no piece of paint enters the gap to avoid leakage. If it is difficult to turn housing, put some hydraulic oil into the pressure port to lubricate the pressure port seals.

HT7E, HT7ES

MODEL CODE

HT7E/HT7ES - 066 - 1 R 00 - A 1 M0 *

Series _____
 HT7E - series - 125 A2 HW
 ISO 2 bolts 3019 - 2 mounting flange
 HT7ES - series - SAE C 2 bolts
 Mounting flange J744c

Cam ring	Displacement	Cam ring	Displacement
	in ³ /rev (cm ³ /rev)		in ³ /rev (cm ³ /rev)
042	= 8.07 (132.30)	057	= 11.02 (180.70)
045	= 8.70 (142.40)	062	= 12.00 (196.70)
050	= 9.67 (158.50)	066	= 13.00 (213.30)
052	= 10.00 (164.80)	072	= 13.86 (227.10)
054	= 10.43 (170.90)	085	= 16.40 (269.80)

Type of Shaft _____

HT7ES
1 = Keyed (SAE - CC)
2 = Keyed (no SAE)
3 = Splined (SAE - C)
4 = Splined (SAE - CC)

HT7ES - HT7E
5 = Keyed (ISO R775-G38M)

Modification


Mounting w/ connection variables
 4 bolts SAE flange (J518C)

P = 1" 1/2		S = 3"	
	UNC	METRIC	
HT7E		M0	
HT7ES	00	M0	

Seal class
 1 = S1 - BUNA N
 4 = S4 - EPDM
 5 = S5 - VITON

Design letter

Porting combination: (00 = Standard)



S - Suction port P - Pressure port

Direction of rotation

R = Clockwise
 L = Counter - clockwise


To change porting position, follow the steps below:

Secure the pump and remove 4 bolts from housing. Move the housing 1 to 2 mm away from the mounting flange. Insert two bolts halfway into the housing. Install a wrench between the two bolts and turn in the desired direction, so that the required position of the pressure port, with respect to suction is obtained. Reinstall the bolts and tighten to the corresponding mounting torque, as provided.

Instructions: Do not remove the housing completely from the mounting flange, remove only 1 to 2 mm to avoid the cartridge pin from moving out from the housing dowel pin hole. Make sure no piece of paint enters the gap to avoid leakage. If it is difficult to turn housing, put some hydraulic oil into the pressure port to lubricate the pressure port seals.

HT6CC, HT6CCM, HT6CCP, HT6CCZ

MODEL CODE

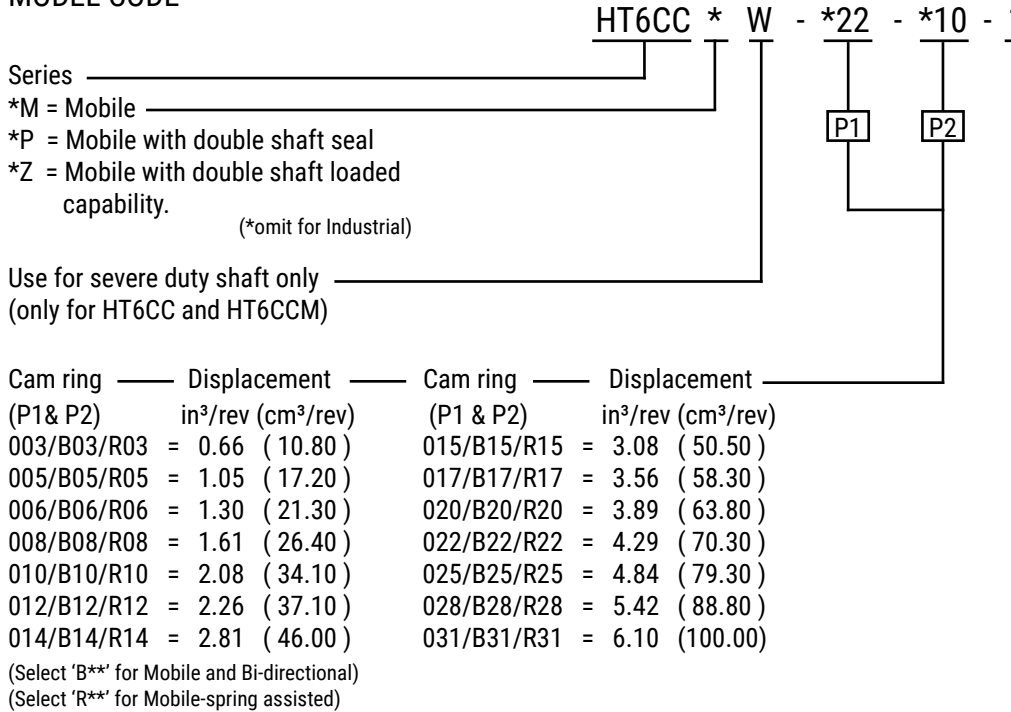

Type of Shaft _____

HT6CC/T6CCM
1 = Keyed (no SAE)
3 = Splined (SAE-BB)
5 = Splined (SAE-B)

Type of Shaft _____

HT6CCMW
2 = Keyed (SAE-BB)
R = Keyed special
X = Keyed special
W = Keyed special
V = Keyed special
T = Splined (SAE j718c)
Q = Splined (SAE-C)
S = Splined (DIN 5462)

Type of Shaft _____

HT6CCP
3 = Splined (no SAE)
4 = Splined (SAE-BB)
6 = Splined (no SAE)
S = Splined (DIN 5462)

HT6CCZ
X = Keyed Non-SAE
W = Keyed Non-SAE
V = Keyed Non-SAE
S = Splined (DIN 5462)

Modification

Port connection variables
SAE 4 bolt flange (J518c)

Code				
UNC	METRIC	P1	P2	S
00	OM	1"	1"	3"
01	W0	1"	3/4"	3"
10	1M	1"	1"	2½"
11	W1	1"	3/4"	2½"


Seal class

1 = S1 - BUNA N
4 = S4 - EPDM
5 = S5 - VITON

Design letter

A = HT6CCZ C = Industrial D = Mobile

Porting combination: (00 = Standard)


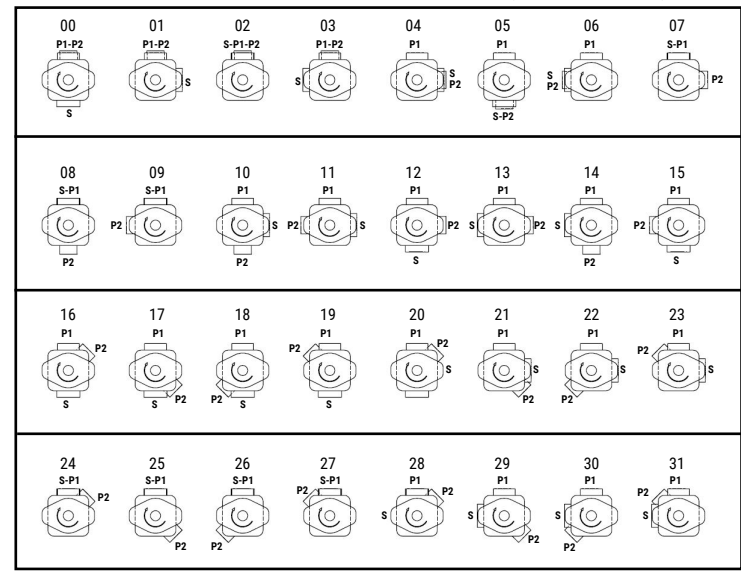


Direction of rotation

R = Clockwise
L = Counter - clockwise

HT6DC, HT6DCM, HT6DCP

MODEL CODE

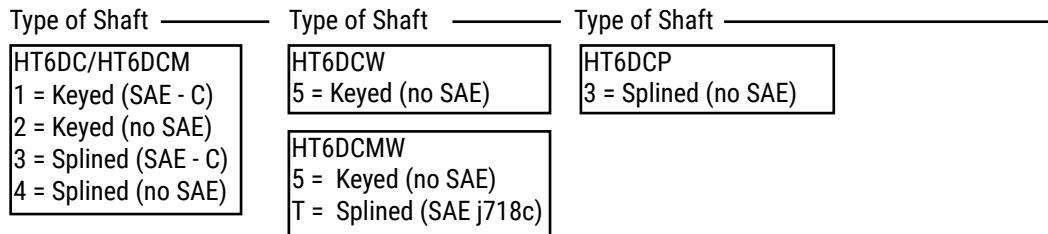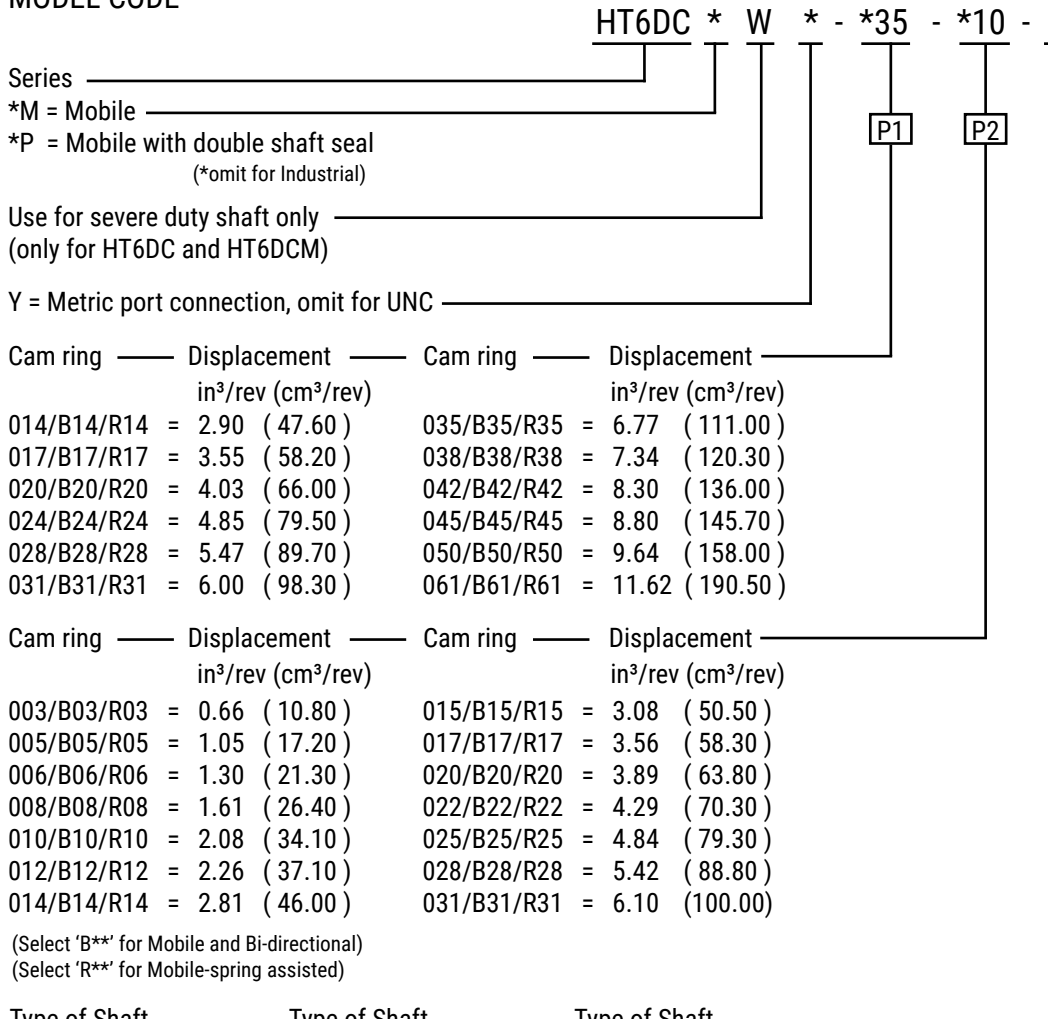

HT6DC * W * - *35 - *10 - 1 R 00 - C 1 00 - *



Modification

Mounting w/ connection variables

	UNC		METRIC	
	00	01	M0	M1
P2	1"	3/4"	1"	3/4"


Seal class

- 1 = S1 (for mineral oil)
- 4 = S4 (for fire resistant fluids)
- 5 = S5 (for mineral oil and fire resistant fluids)

Design letter

- B = Industrial
- C = Mobile

Porting combination: (00 = Standard)

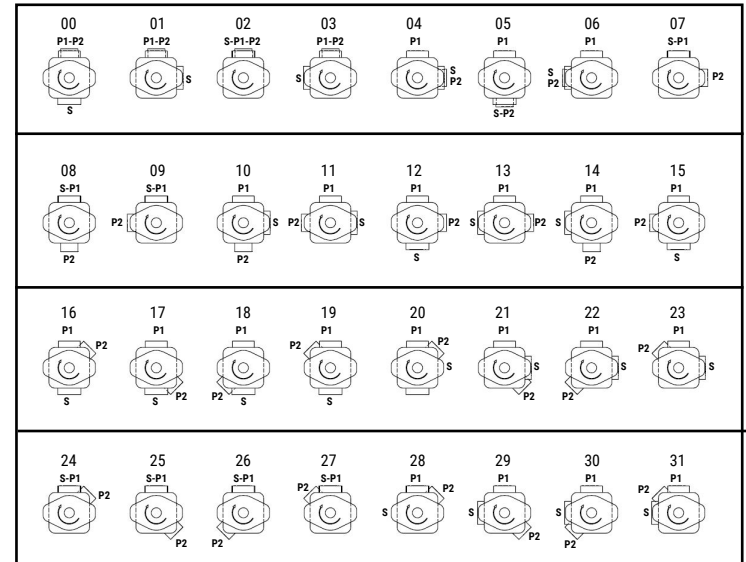


Direction of rotation

- R = Clockwise
- L = Counter - clockwise

HT6ED, HT6EDM, HT6EDP

MODEL CODE

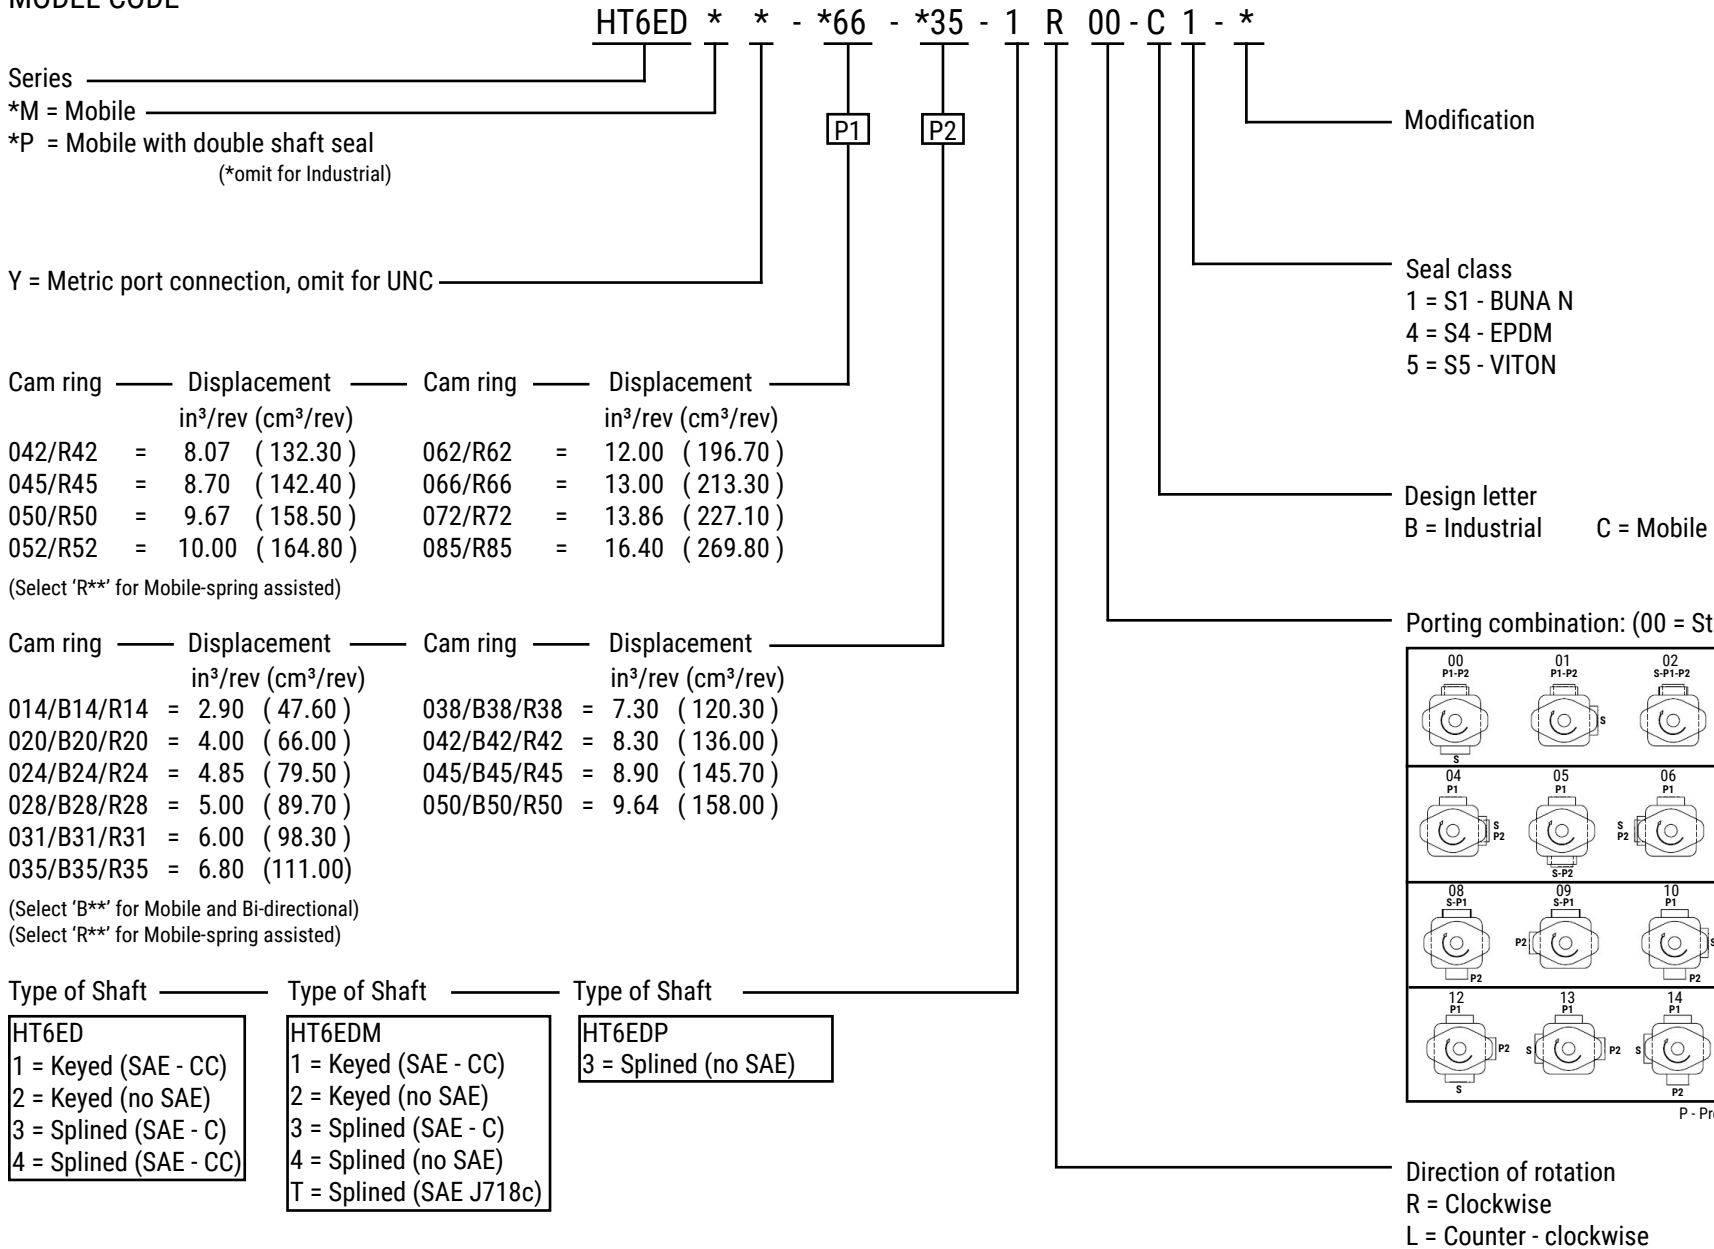

HT7ED, HT7EDS

MODEL CODE

HT7ED/HT7EDS - 042 - B22 - 1 R 00 - A 1 - M0 - ..

Series _____
 HT7ED - ISO - 2 bolts 3019-2
 Mounting flange 125 B4 HW
 HT7EDS - SAE - C 2 Bolts
 Mounting flange J744

Cam ring	Displacement	Cam ring	Displacement
	in ³ /rev (cm ³ /rev)		in ³ /rev (cm ³ /rev)
042	= 8.07 (132.30)	057	= 11.02 (180.70)
045	= 8.70 (142.40)	062	= 12.00 (196.70)
050	= 9.67 (158.50)	066	= 13.00 (213.30)
052	= 10.00 (164.80)	072	= 13.86 (227.10)
054	= 10.43 (170.90)	085	= 16.40 (269.80)

Cam ring	Displacement	Cam ring	Displacement
	in ³ /rev (cm ³ /rev)		in ³ /rev (cm ³ /rev)
B14	= 2.68 (43.9)	B31	= 6.05 (99.1)
B17	= 3.36 (55.0)	B35	= 6.92 (113.4)
B20	= 4.03 (66.0)	B38	= 7.36 (120.6)
B22	= 4.29 (70.3)	B42	= 8.39 (137.5)
B24	= 4.95 (81.3)	045	= 8.89 (145.7)
B28	= 5.49 (89.9)	050	= 9.64 (157.9)

Type of Shaft

HT7EDS
 1 = Keyed (SAE - CC)
 2 = Keyed (no SAE)
 3 = Splined (SAE - C)
 4 = Splined (SAE - CC)

HT7ED-HT7EDS
 5 = Keyed (ISO/R775 - G38M)




Modification
 Mounting w/ connection variables
 4 bolts SAE flange J518c

P1=1½"	P2=1¼"	S=4"
HT7EDS	HT7ED-HT7EDS	
UNC	METRIC	
01	M1	

Seal class
 1 = S1 - BUNA N
 4 = S4 - EPDM
 5 = S5 - VITON

Design letter

Porting combination: (00 = Standard)

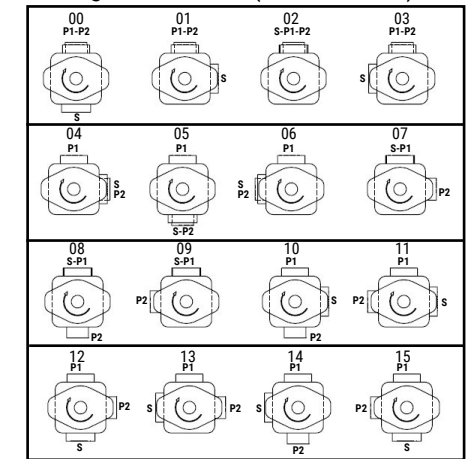

Direction of rotation
 R = Clockwise
 L = Counter-clockwise

HT7EE, HT7EES

MODEL CODE

HT7EE/HT7EES - 066 - 045 - 1 R 00 - A 1 0 00 -

Series _____
 HT7EE Series - 250 B4HW
 ISO 3019 - 2 mounting flange
 HT7EES Series - SAE 4 bolts
 Mounting flange J744c

Cam ring	Displacement	Cam ring	Displacement
	in ³ /rev (cm ³ /rev)		in ³ /rev (cm ³ /rev)
042	= 8.07 (132.3)	057	= 11.18 (183.2)
045	= 8.77 (142.5)	062	= 12.0 (196.6)
050	= 9.67 (158.5)	066	= 13.0 (213.0)
052	= 10.0 (163.8)	072	= 13.86 (227.1)
054	= 10.43 (170.9)	085	= 16.40 (268.7)

Type of Shaft _____

HT7EE
 2 - Keyed G45N (ISO 3019-2)

HT7EES
 1 - Keyed (SAE CC)
 3 - Splined (SAE CC)
 4 - Splined (SAE D&E)
 5 - Keyed (SAE D & E)

To change porting position, follow the steps below:

1. Secure pump and remove the 4 bolts from the mounting flange.
2. Turn the mounting flange 1 to 2 mm away from the housing. Insert one bolt halfway to mounting flange.
3. Install a wrench between the shaft and the bolt and turn in the desired way, so that the required position of the P1 port, with respect to suction is obtained.
4. Reinstall and tighten the bolts to the specified mounting torque as provided on page 2.
5. Follow the same procedure for changing the P2 port position.

Instruction: Remove the mounting flange/end cap 1 to 2 mm only (do not completely remove the mounting flange/end cap) to avoid the cartridge pin from moving out of the housing dowel pin hole. Make sure that there are no foreign piece objects that enters into the gap to avoid leakage. If it is difficult to turn mounting flange/end cap put some hydraulic oil in to the pressure port to lubricate the pressure port seals.



Modification

Mounting w/ connection variables
 4 bolts SAE flange (J518c)

	UNC	METRIC
HT7EE		MO
HT7EES	00	MO

Coupling Adaptor


0 = None
 2 = SAE 'B'
 3 = SAE 'BB'

Seal class

1 = S1 - BUNA N
 4 = S4 - EPDM
 5 = S5 - VITON

Design letter

Porting combination

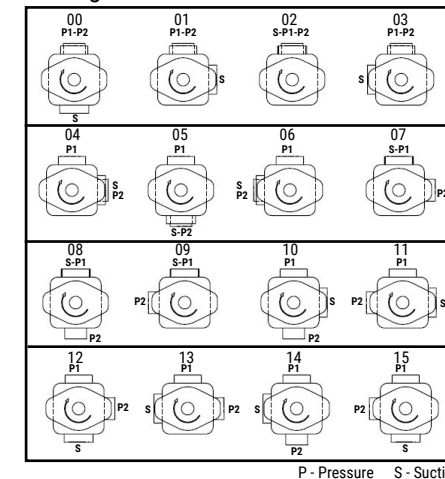

Direction of rotation (view on shaft end)

R = Clockwise

L = Counter - clockwise

HYFLOW SOUTHEAST, INC. VANE PUMP WARRANTY

The Hyflow Southeast vane pump and other parts covered in this catalog are warranted for a period of (1) one year (12 months) from the date of service or 1-1/2 years (18 months) from date of build against any defect in material and workmanship which existed at the time of sale by Hyflow Southeast Inc., according to the following provisions, subject to the requirements that the vane pump must be used only in the appropriate applications and following the Installation and Owner's Manual instructions.

If during the warranty period the vane pump fails due to a defect in any part in material or workmanship that existed at the time of the sale by Hyflow Southeast Inc., the defective part will be repaired or replaced, at the discretion of Hyflow Southeast Inc., at no charge, if the defective part is returned to Hyflow Southeast Inc. with transportation prepaid. Authorization from your sales representative is required to initiate the warranty.

WARNING: The above warranty shall terminate if any alterations or repairs are made to the vane pump other than at Hyflow Southeast Inc.

The foregoing warranty is in lieu of all other obligations and liabilities, including negligence and all warranties of merchantability and suitability, expressed or implied, and state Hyflow Southeast' entire and exclusive liability and buyer's exclusive remedy for any claim of damages in connection with the sale, repair or replacement of the above goods, their design, installation or operation. Hyflow Southeast Inc. will in no event be liable for any direct, indirect, special, incidental or consequential damages whatsoever, and our liability under no circumstances will exceed the contract price for the goods for which liability is claimed.

Hyflow Southeast Inc. is not liable for any repair related cost incurred to the Buyer at any time if the repair is conducted by the buyer without written authorization from Hyflow Southeast Inc.



HYFLOW®

CALIFORNIA

**2134 S. Green Privado
Ontario, CA 91761
(909) 628-9866**

GEORGIA

**241 Industrial Park Rd
Baldwin, GA 30511
706-686-4198**